



INSTRUCTIONS FOR INSTALLATION, USE AND MAINTENANCE

RAIS 2:1

IMPORTANT INFORMATION

On first lighting the stove you must be careful not to touch the painted surfaces and it is MOST IMPORTANT that the door is kept slightly 'ajar' in order for the door seal and sealant to cure. This will prevent the door seal sticking to the painted body and becoming damaged.



We cannot be held responsible for any misprints.

Revision :

Date : 2011

INTRODUCTION	4
WARRANTY	4
SPECIFICATIONS	5
CONVECTION	6
INSTALLATION INSTRUCTIONS	7
CHIMNEY	8-9
INSTALLATION	10
INSTALLATION OF STOVE	11
QUICK GUIDES	12-13
INSTALLATION DISTANCE TO NON-COMBUSTIBLE WALL	14-15
INSTALLATION DISTANCE TO COMBUSTIBLE WALL	16-17
GENERAL INSTALLATION	18
FOR THE INSTALLER	19
OPERATING INSTRUCTIONS	20
FUEL	20
DRYING AND STORAGE	21
REGULATION OF COMBUSTION AIR	21
USING THE WOOD BURNING STOVE	22
FIRST USAGE	23
LIGHTING AND FUELLING	24-25
CLEANING AND CARE	26
CLEANING OF THE FLUE WAYS	27
PROBLEM SOLVING	28
ACCESSORIES AND SPARE PARTS	29
SPARE PART DIAGRAM	30-31

Introduction

Thank you for purchasing a Rais wood burning stove.
These appliances have been approved by HETAS as
intermittent operating appliances for burning wood logs only.
These appliances have been approved for use in Smokeless Zones



A Rais wood burning stove is more than just a heat source: it also shows that you care about design and quality in your home.

To make the most of your wood burning stove it is important that you read the manual thoroughly before installing and using it.

In the case of warranty coverage, and for general queries regarding your wood burning stove, it is important that you know the stove's production number. We therefore recommend that you note down the number in the table below. The production number is located at the back of the stove at the bottom.

Warranty

Your Rais wood burning stove comes with a 5 year warranty.
The warranty, however, does not cover heat-insulating materials, glass and seals.
These are available to order from your local Rais dealer / stockist.

Any alterations made to the stove will void the warranty.

Produced by: RAIS A/S Industrivej 20 9900 Frederikshavn, Denmark
Prod. nr. <div></div>

Date:

Distributor:

Specifications

	2:1
Nominal output (kW):	6
Min. / Max. output (kW):	3-9
Heating area (m²):	Ca. 60-135
Size, width/depth/height (mm):	807 / 474 / 909 without socket
Combustion chamber width/depth/height (mm).	500 / 244 / 374
Recommended amount of wood when fuelling (kg) (Based on 2 - 3 logs of wood approx. 25cm)	2.1
Min. uptake / Min. draught (Pascal):	-12
Weight (kg):	140
Efficiency (%)	79
Particles after NS3058/3059 (g/kg)	3.6
Dust measured according to Din+ (mg/Nm³)	
Smoke gas mass flow (g/s):	5.1
Smoke gas temperature (°C):	297
Intermittent operation:	Fuelling should be undertaken within 3 hours

Please Note, this appliance has been tested by the manufacturers and works on a 3m straight flue.

Convection

Rais stoves are convection stoves. This means that the stove's back and side panels are not over-heated. Convection means that there is a circulation of air, which ensures that the heat is distributed more evenly throughout the entire room. The cold air is sucked in at the base of the stove and up through the convection channel, which runs along the stove's combustion chamber. The heated air comes out at the top of the stove, which ensures a circulation of warm air throughout the room.

The stoves are equipped with cool door handles - a Rais special feature - which means you could almost do away with gloves. Be aware, however, that all exterior surfaces become hot during use - so take extreme care.

Installation Instructions

The following pages give instructions for the safe and proper installation of this heating appliance in the UK. These instructions cover the basic principles of installation, although some details may need slight modification to suit particular local site conditions.

In all cases the installation must comply with current UK Building Regulations, Local Authority Byelaws and other specifications or regulations as they affect the installation of the stove.

Please note that it is a legal requirement under England and Wales Building Regulations that the installation of the stove is either carried out under local Authority Building Control approval or is installed by a Competent Person registered with a Government approved Competent Persons Scheme. HETAS operate such a scheme and a listing of their registered Competent Persons can be found on their website at www.hetas.co.uk.

It should be noted that the current Building Regulations requirements are given in Approved Document J. These requirements may also be met by adopting the relevant recommendations given in British Standards BS 8303, BS 6461 and BS 7566.

WARNING. Health and Safety Advice Notice.

The installation of this heating appliance is governed by the Health and Safety at Work Act 1974. It is the responsibility of the installer to ensure that all requirements of this Act are met during the installation works. Attention is drawn in particular to the following:

- Handling: The appliance is a heavy item and adequate facilities must be available or loading, unloading and site handling.
- Fire Cement: Some types of fire cement are caustic and should not be allowed to come into contact with the skin. Protective gloves should be worn when handling fire cement. In case of contact with the skin, wash immediately with plenty of water.
- Asbestos: This stove contains no asbestos. If there is a possibility of disturbing any asbestos in the course of the installation, then please seek specialist guidance and use appropriate protective equipment.
- Metal Parts: When installing or servicing this stove care should be taken to avoid the possibility of personal injury.

Important Warning - Preparatory Work and safety Checks:

- This stove must not be installed into a chimney which serves any other heating appliance.
- There must not be an extractor fan fitted in the same room as the stove, as this can cause the stove to emit fumes into the room.
- If this appliance is installed into an existing chimney, the chimney must first be swept and examined for soundness and suitability, before the appliance is installed (see also section headed 'Chimney').

Chimney

The chimney is the driving force which makes the stove function. In order for the stove to perform satisfactorily the chimney height must be sufficient to ensure the correct draught of 14 to 18 Pa, so as to clear the products of combustion and prevent problems of smoke leaking into the room when the stove is lit.

Note: A chimney height of not less than 4.5 metres, measured vertically from the outlet of the stove to the top of the chimney, should be satisfactory.

Alternatively the calculation procedure given in BS 5854:1980 may be used as the basis for deciding whether a particular chimney design will provide sufficient draught.

Please Note, this appliance has been tested by the manufacturers and works on a 3m straight flue.

The outlet from the chimney should be above the roof of the building in accordance with the provisions of the Building Regulations Approved Document J.

If the installation is into an existing chimney, then it must be sound and have no cracks or other faults which may allow fumes into the house. Older properties, especially, may have chimney faults or the cross section may be too large i.e. more than 230 x 230mm.

Remedial action should be taken if required, expert advice should be sought where required.

If the chimney requires lining, then a suitable solid fuel flue liner must be used, in accordance with Building Regulations Approved Document J.

Any existing chimney must be clear of obstruction and should have been swept clean immediately before the installation of the stove. If the stove is fitted in place of an open fire, then the chimney should be swept one month after installation to clear any soot falls which may have occurred due to the difference in combustion between the stove and the open fire.

If there is no existing chimney then either a prefabricated block chimney, in accordance with Building Regulations Approved Document J or a twin wall insulated stainless steel flue to BS 4543 can be used. These chimneys must be fitted in accordance with the manufacturer's instructions and the Building Regulations.

A single wall metal fluepipe is suitable for connecting the stove to the chimney but is not suitable for using for the complete chimney. The chimney and connecting fluepipe must have a minimum diameter of 150mm and it's dimension should be not less than the size of the outlet socket of the stove which is 150mm. Any bend in the chimney or connecting fluepipe should not exceed 45°. 90° bends should not be used.

Combustible material should not be located where the heat dissipating through the walls of fireplaces or flues could ignite it. Therefore when installing the stove in the presence of combustible materials due account must be taken of the guidance on the separation of combustible material given in Building Regulations Approved Document J and also in these stove instructions.

If it is found that there is excessive draught in the chimney then either an adjustable flue damper or alternatively a draught stabiliser should be fitted. The adjustable flue damper should not close off the flue entirely, but should in its closed position leave a minimum continuous opening free area of at least 20 % of the total cross sectional area of the flue or fluepipe.

Adequate provision e.g. easily accessible soot door or doors must be provided for sweeping the chimney and connecting fluepipe.

You should also familiarise yourself with the draught conditions for chimneys with 2 flues.

For strong draughts, the chimney or flue should be fitted with a draught stabiliser. In which case, it is important to ensure that there is a free flow-through area of minimum 20 cm² when the regulating gate is shut. Otherwise, the fuel energy may not be used optimally.

If, at any time, you are unsure about the condition of the chimney, you should contact a chimney sweep.

Remember that access to the soot door should be kept clear.

Installation

It is prohibited to carry out unauthorised alterations to the stove.

There must be plenty of fresh air in the room where the stove is being installed, in order to ensure proper combustion. Note that any mechanical exhaust ventilation - e.g. an extraction hood - may reduce the air supply. Any air grilles must be placed in such a manner, that the air supply is not blocked.


Building Regulations Approved Document J gives specific guidance on the required permanent ventilation into the room for combustion air of solid fuel appliances.

The floor structure must be able to carry the weight of the wood burning stove, as well as the weight of a chimney, if necessary.

When you choose where to set up your RAIS wood burning stove, you should consider the heat distribution to the other rooms. This will enable you to get the best use out of your stove.

The stove should be set up at a safe distance from inflammable materials.

See the manufacturer's plate on the wood burning stove.

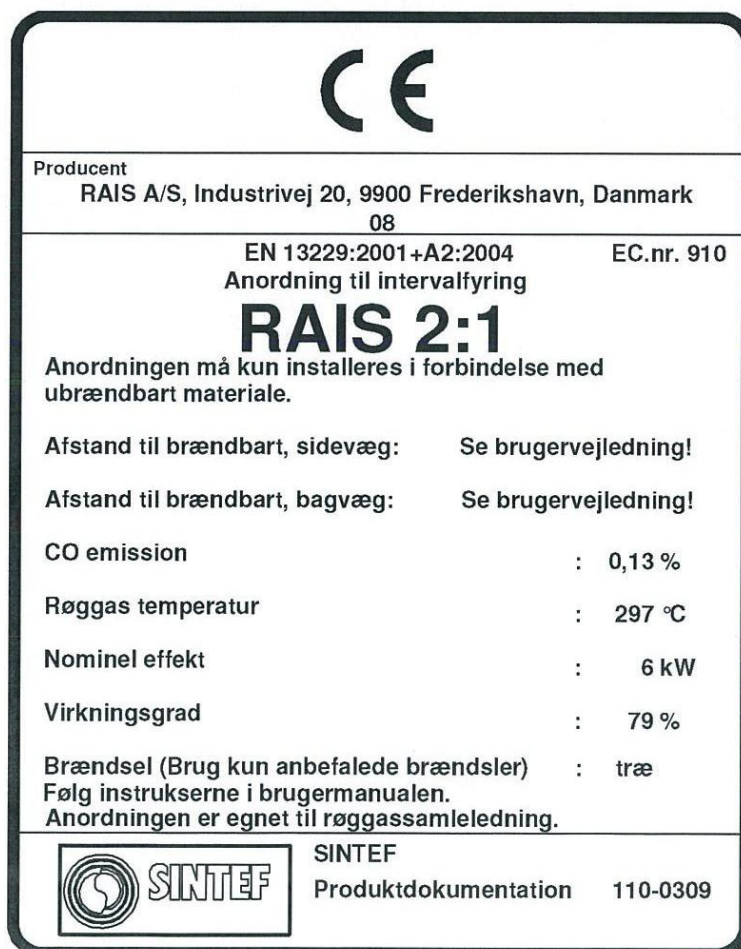

Manufacturer's Plate for RAIS 2:1

Installation of stove:

NOTE ! A decision must be made concerning the positioning of the inlets and outlets of the convection system. Discolouration of the wall above the doors and the convection air outlets may occur due to convected hot air.

RAIS cannot take responsibility for any building work or consequential damage.

The stove should be inspected for defects at receipt.

Lift the stove from the pallet to the place of installation on to a suitably protected floor. The socket delivered with the stove corresponds with the minimum installation height. If the stove is installed in a higher position, adjustable extensions can be used. Accessories are available to order from your Rais dealer / stockist.

Using a spirit level against the door and body of the stove, ensure that the stove is perfectly level and make adjustments using the levelling bolts in the base.

Remove the frame and door from the stove. Be careful not to damage the glass or paint. Leave the protective tape and plastic on the handles during installation.

Seal the flue pipe on to the flue outlet using fire cement and self tapping screws and connect to the chimney.

Connect the convection air ducts, if required.

The stove is now ready to be built in using either stud walls or solid walls.

When the walls have been finished and decorated, the frame and door can be re-fitted. Remove all protective plastic and tape prior to commissioning.

The frames are adjusted to the maximum wall thickness at the factory.

The frames can be adjusted from 466mm minimum to 480mm maximum.

Open the door and loosen the bolts at the top and bottom, then gently push the frame back towards the wall.

Check that the frames are parallel to the walls and the doors in the closed position, adjust if necessary.

Re-tighten the bolts at the top and bottom.

Made to measure frames are available to order with the stove from your Rais dealer / stockist.

Robeys

A PASSION FOR QUALITY

RAIS
ART C F F I R F


RAIS 2:1 STUD WALL QUICK GUIDE

Please ensure that all appliance and flue installations are undertaken by a competent approved installer, following the Rais installation guide and are to current local Building Regulations.

All dimensions are in mm and are to finished wall surfaces.

We recommend that all dimensions are checked against the appliance on site.

This is NOT a working drawing.

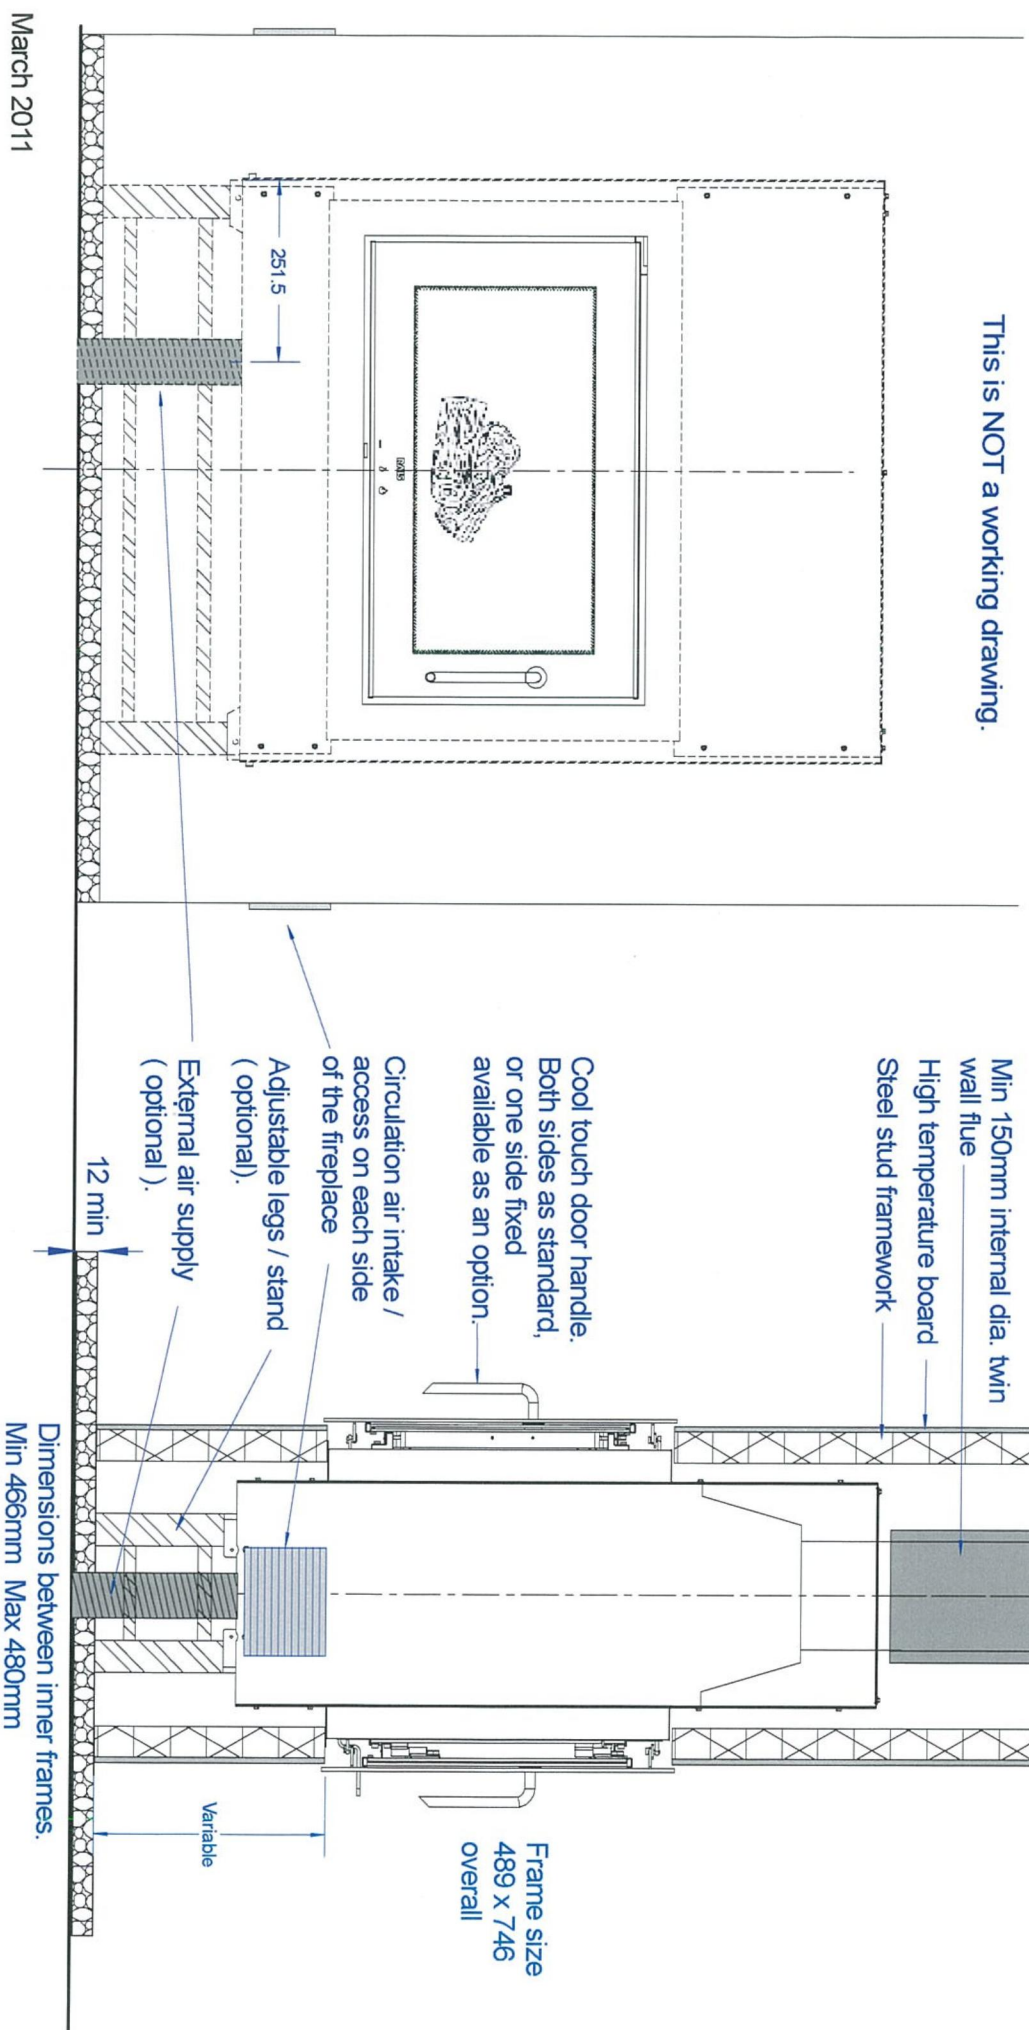


RAIS 2:1 SOLID WALL QUICK GUIDE

Please ensure that all appliance and flue installations are undertaken by a competent approved installer, following the Rais installation guide and are to current local Building Regulations.

All dimensions are in mm and are to finished wall surfaces.


We recommend that all dimensions are checked against the appliance on site.


This is NOT a working drawing.

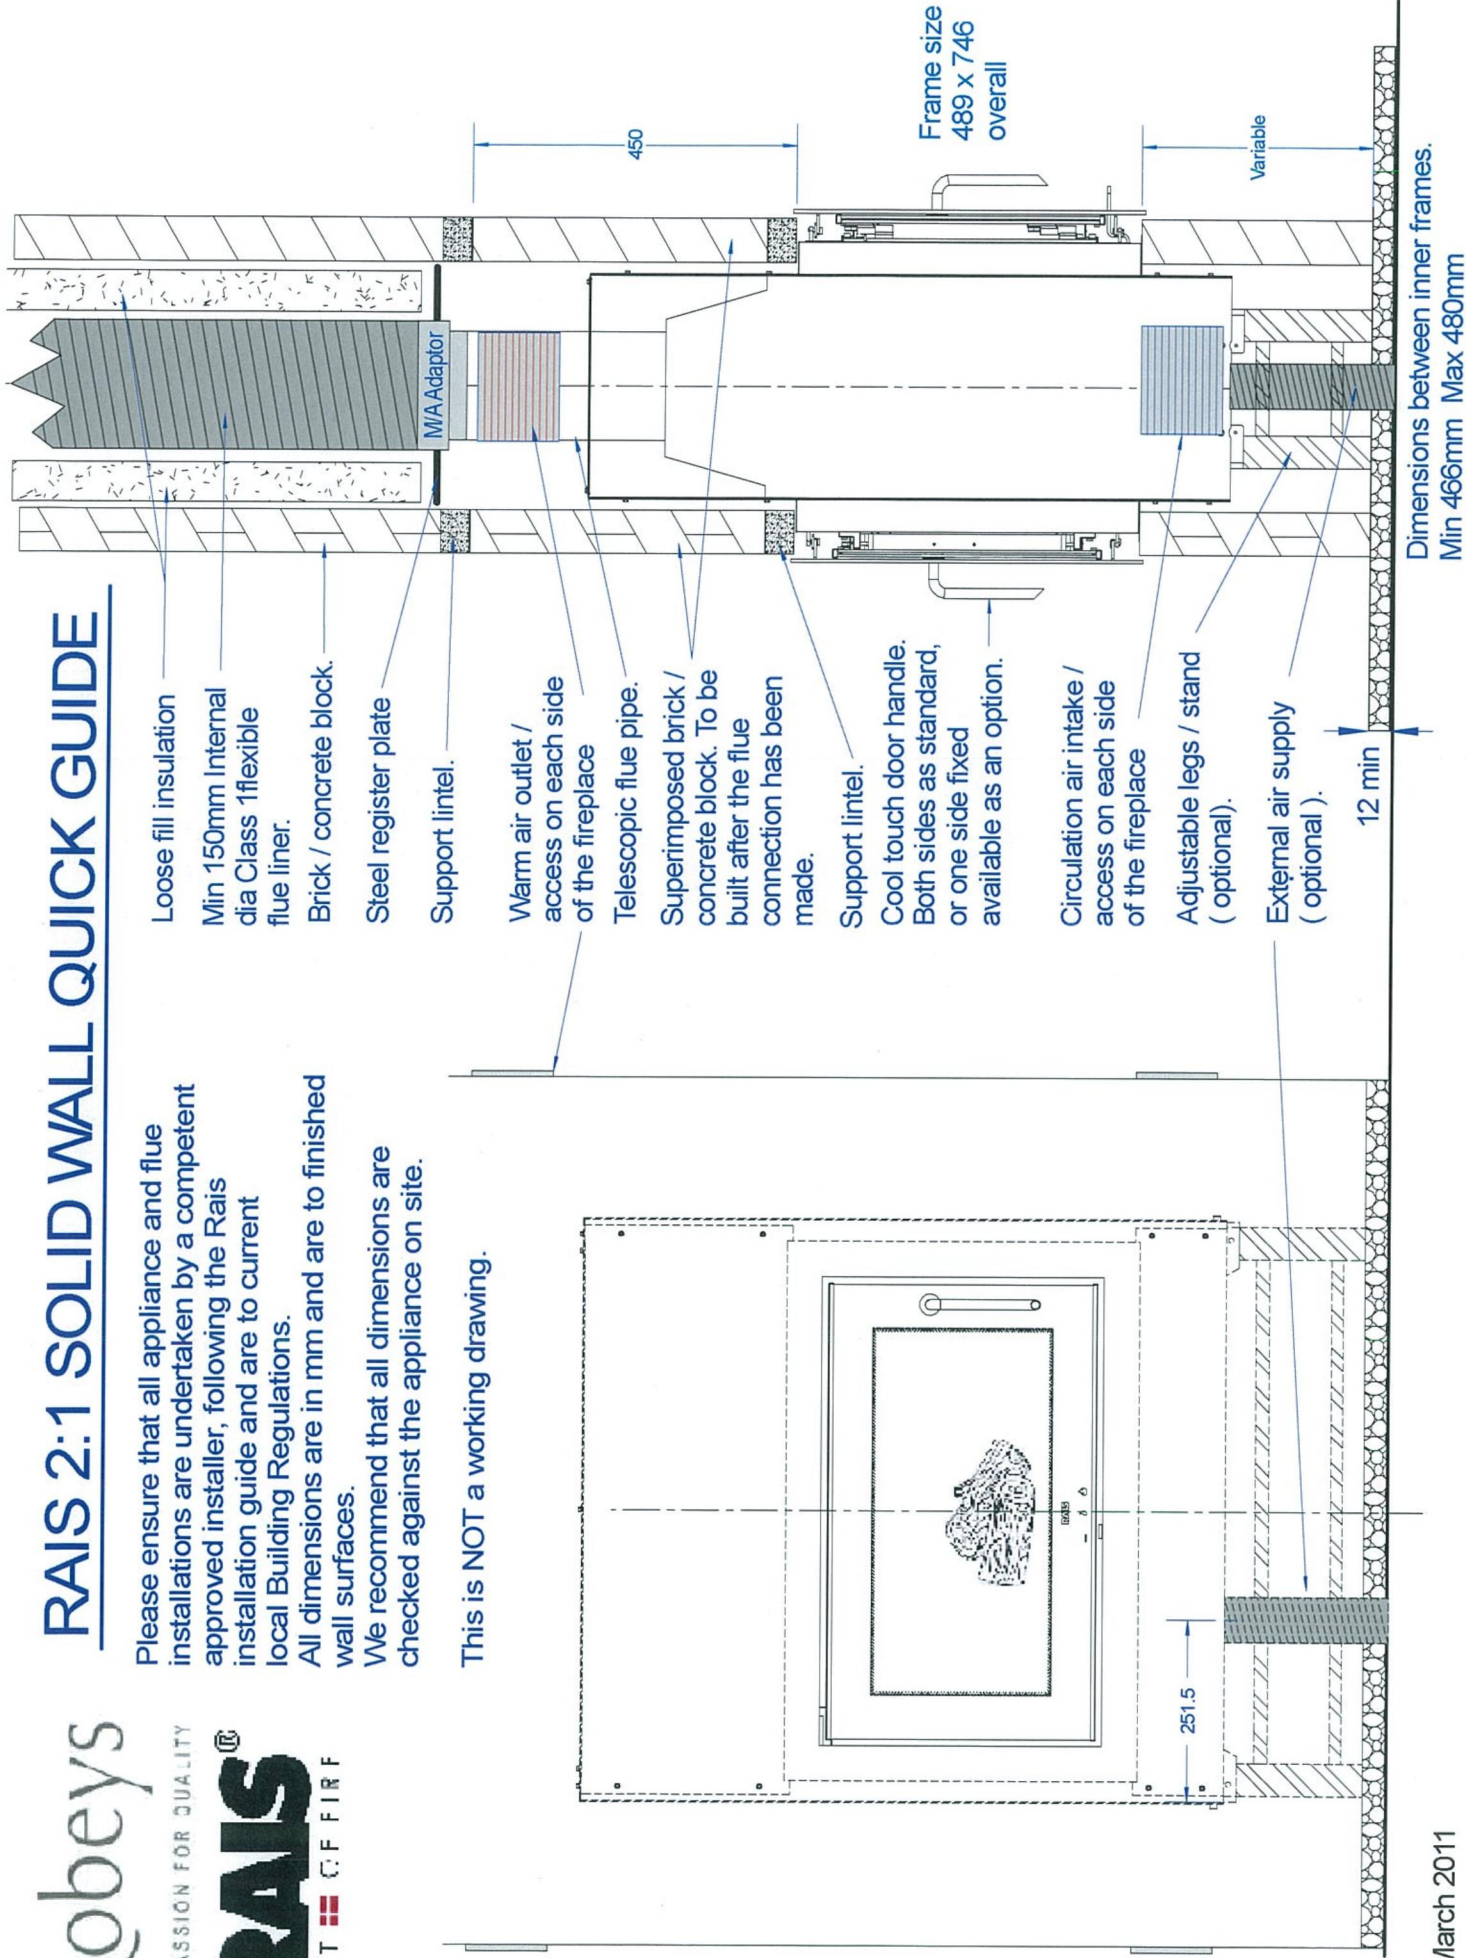


Mounting distance for panelled wall - combustible material


Insulation ability such as Aqua panel (coefficient of thermal conductivity 0.36 W/mk) or better. Please use metal stud.

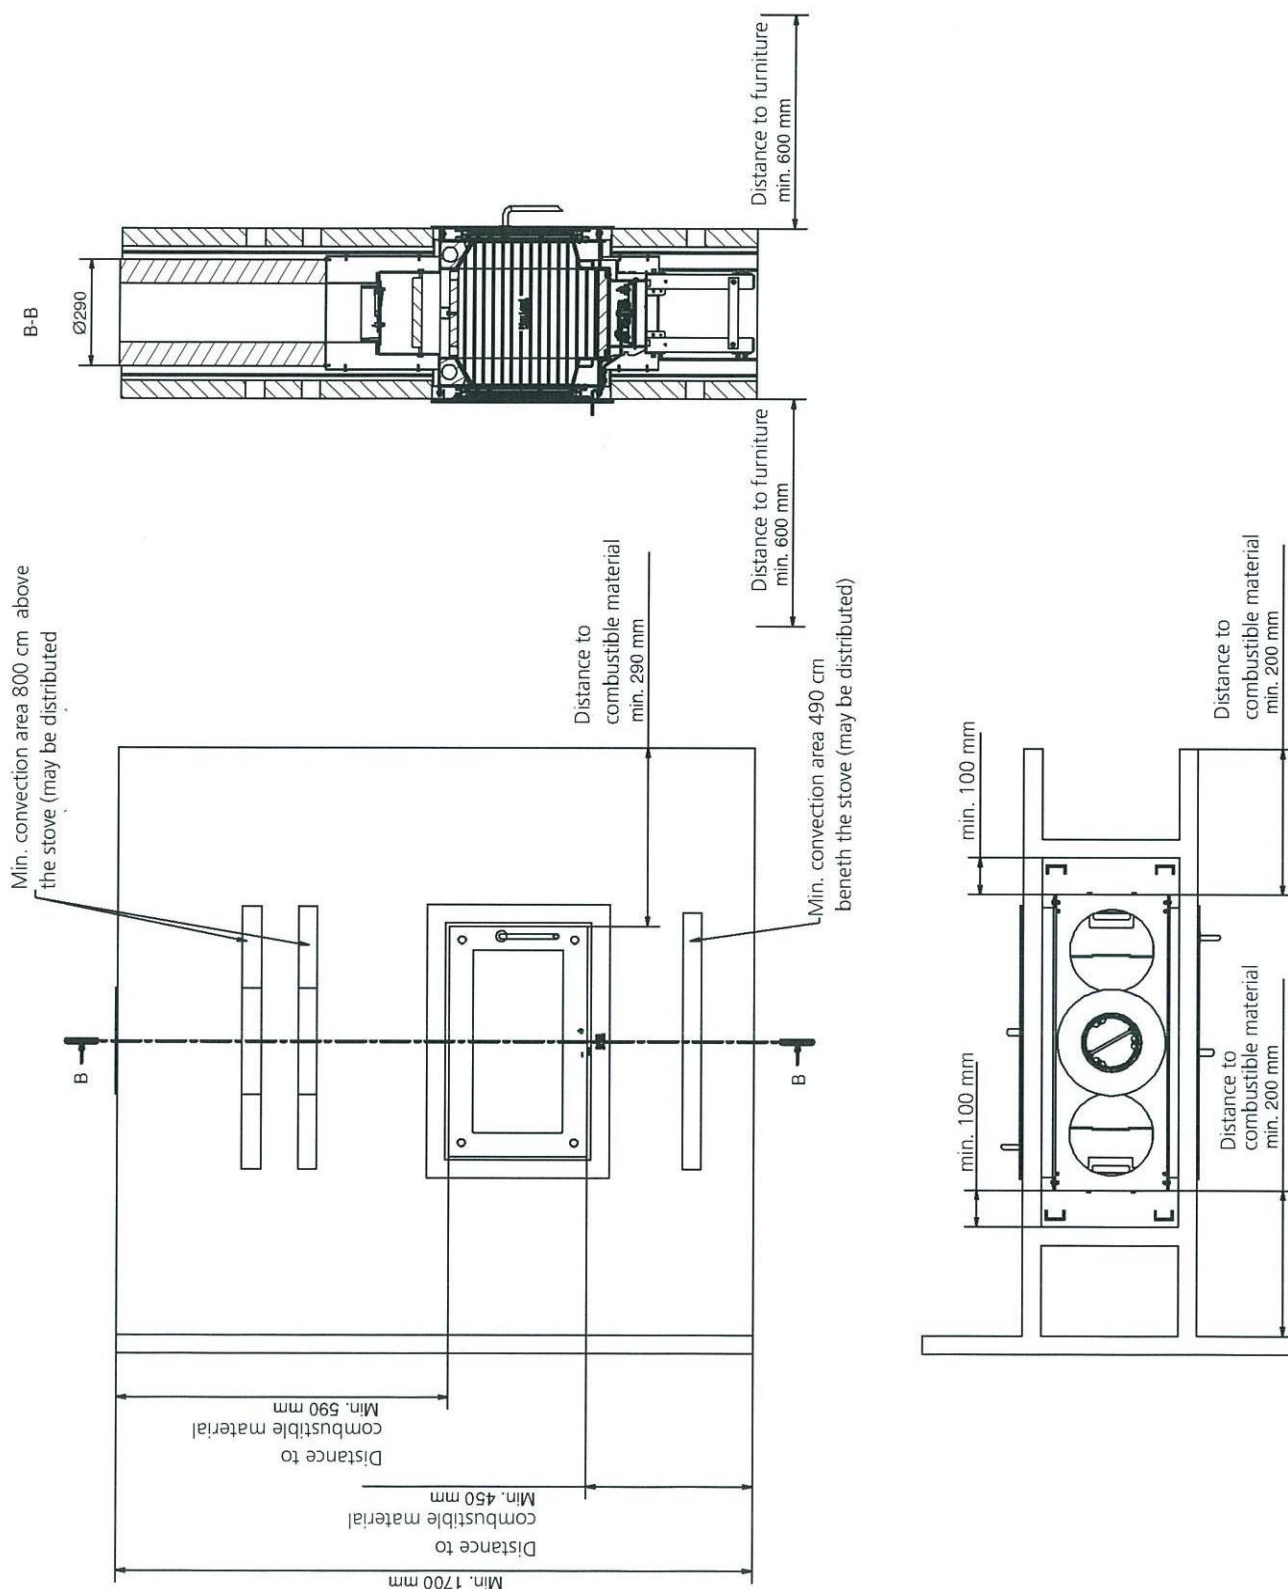

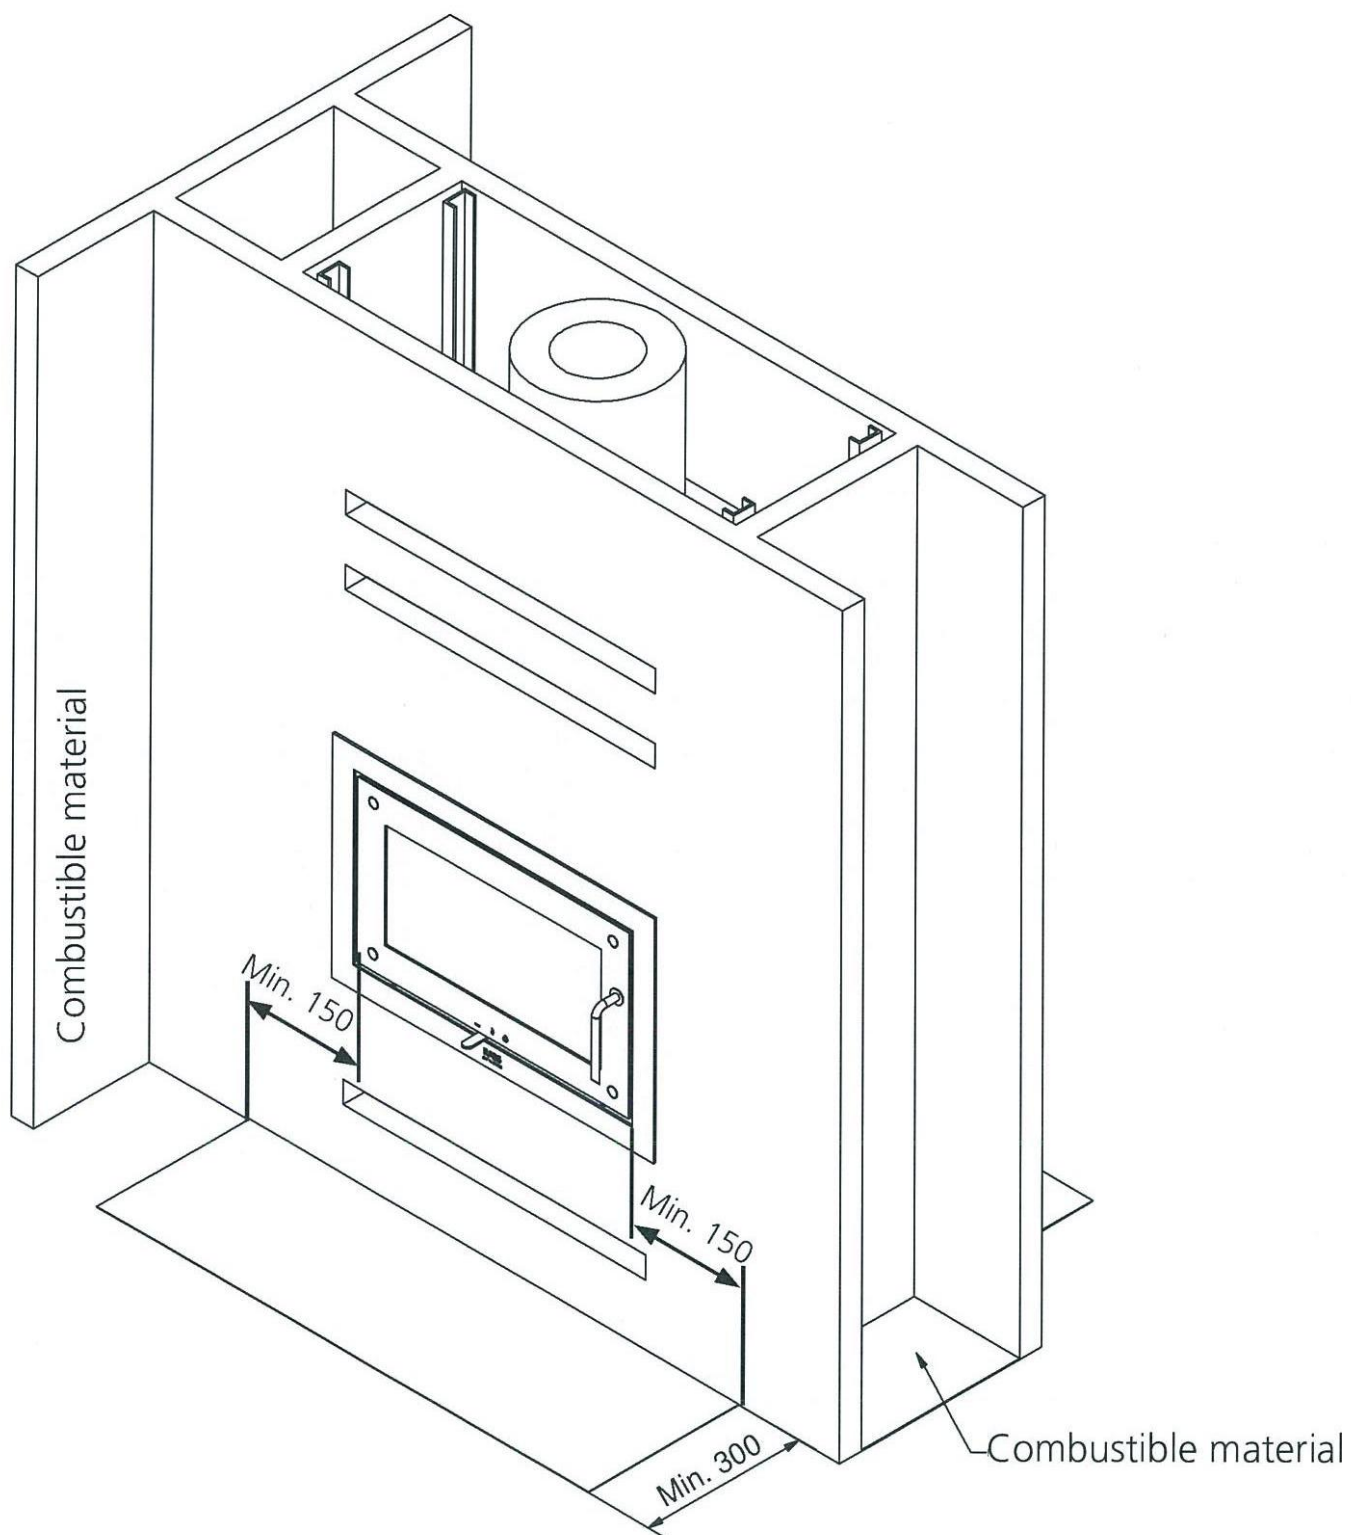

Mounting distance for brick wall / firewall

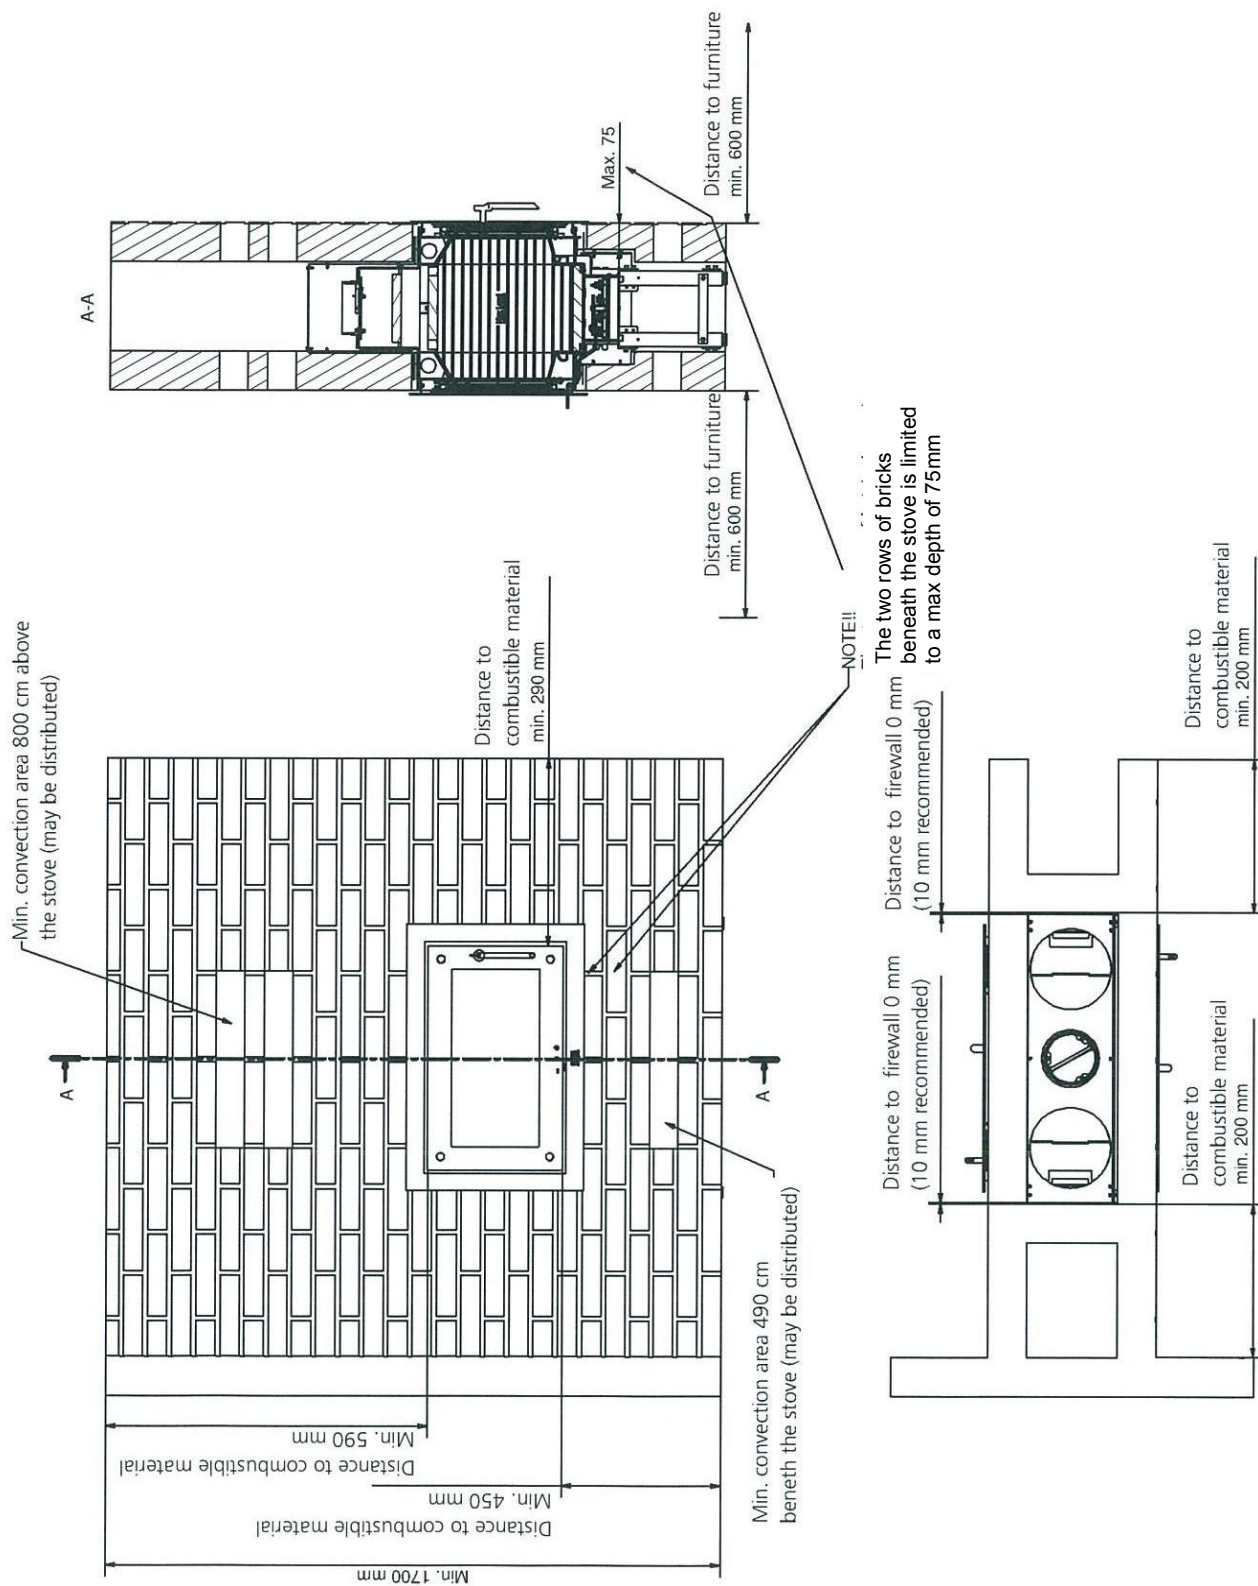

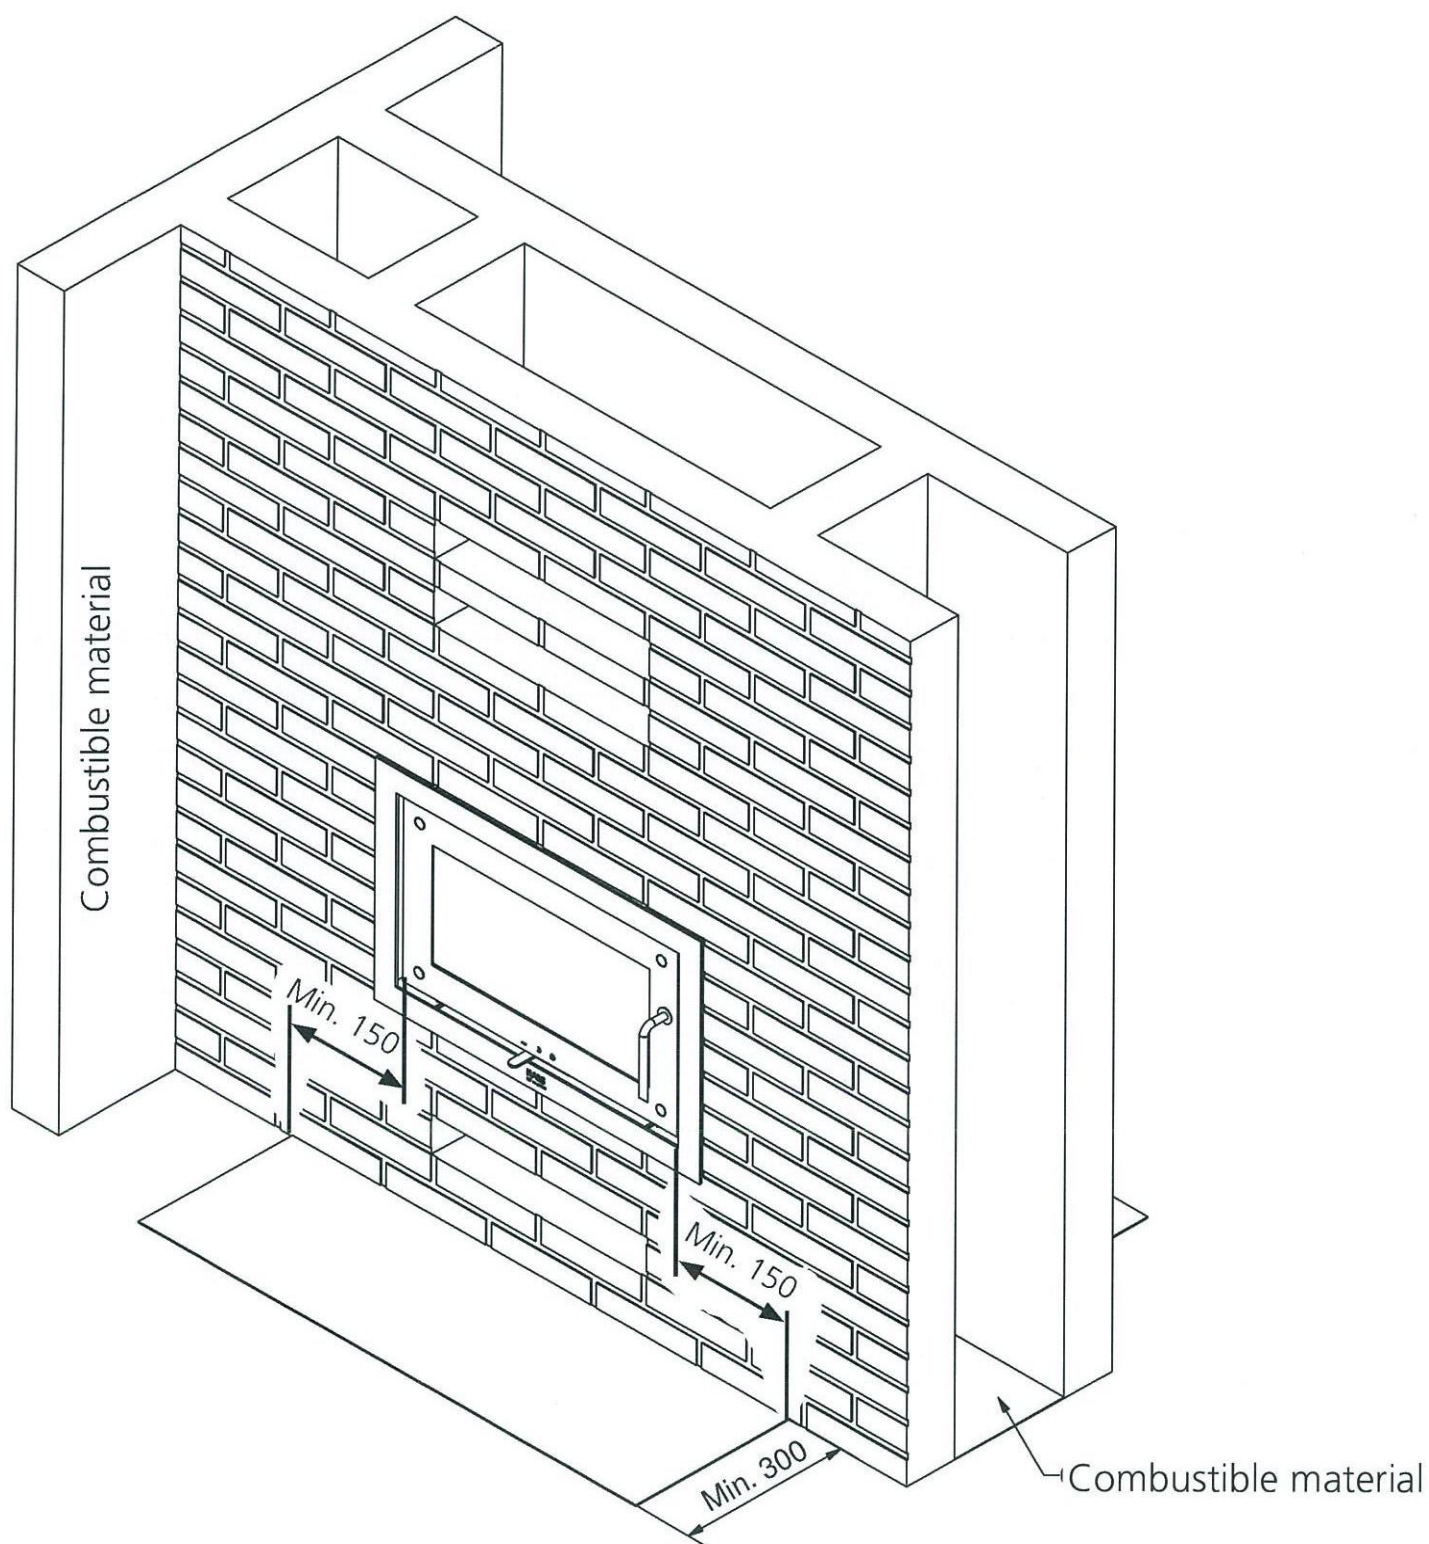

Installation distances for non combustible wall

We recommend a minimum distance to non combustible material of 50mm (F) for cleaning considerations.

Using uninsulated flue pipe, the minimum distance to a combustible wall must be 450mm or 225mm if the wall is heatshielded (see Section J of the Building Regulations) from the flue pipe.

Installation distance to combustible wall

To find out whether the wall next to where the stove is going to be installed is flammable, you should contact your building contractor or the local building authorities.

The hearth should be able to accommodate the weight of the stove. The chimney must be independently supported by wall brackets or a ceiling support plate. The weight of the stove is indicated in the brochure.

The stove should always be installed on a non-combustible hearth of a size and construction that is in accordance with the provisions of the current UK Building Regulations Approved Document J.

If the stove is to be installed on a wooden floor, it must be covered with a non-combustible material at least 12mm thick, in accordance with UK Building Regulations Approved Document J, to a distance of 300 mm in front of the stove and 150 mm to each side measuring from the door of the combustion chamber.

The clearance distances to combustible material beneath, surrounding or upon the hearth and walls adjacent to the hearth should comply with the guidance on the separation of combustible material given in UK Building Regulations Approved Document J and also in these stove instructions.

Inform the user that the appliance has been commissioned and ready to use and give instruction on the safe operation of the stove.

These Instructions must be left with the user and the user should be instructed to keep them in a safe place.

For the Installer

Finally before firing the stove for the first time a check should be made to ensure that the assembly and stove installation has been satisfactory and that there are no leaks in any seals in the appliance and appliance connections to the chimney.

Ensure that the appliance and chimney flue are functioning correctly before finally handing over to the user. Read the later parts of this manual for guidance on care required when first lighting.

Inform the user that the appliance has been commissioned and ready to use and give instruction on the safe operation of the stove.

These Instructions must be left with the user and the user should be instructed to keep them in a safe place.

Operating instructions

Please note that HETAS Appliance Approval only covers the use of dry seasoned wood logs on this appliance. HETAS Approval does not cover the use of other fuels either alone or mixed with the wood logs, nor does it cover instructions for the use of other fuels.

Fuel

The stove is designed and approved in accordance with EN 13240 and NS 3058 for stoking split, dried firewood. The firewood must have a water content of 15-22% and its max. length should be the length of the combustion chamber minus 50-60 mm.

Stoking with wet firewood causes both soot, environmental pollution and bad fuel economy. Freshly cut wood contains approx. 50-70% water and is thoroughly unsuitable for stoking. Allow at least 1 year of storage time for newly cut wood before using. Wood with a diameter of more than 100 mm should be split. Regardless of wood size, it should always have at least one surface area free of bark.

We do not recommend stoking with painted, laminated or impregnated wood, wood with a synthetic surface, painted refuse wood, chipboard, plywood, domestic waste, paper briquettes and pit coal, as this will produce malodorous smoke, which could be poisonous.

When firing with the above-mentioned items and amounts larger than those recommended, the stove is subjected to a larger amount of heat, which results in a higher chimney temperature and lower efficiency. This can result in the stove and chimney becoming damaged and would void the warranty.

The calorific value of the firewood is closely connected to the moisture level.

Moist firewood has a low heat value. The more water the wood contains, the more energy it takes for this water to vaporise, resulting in this energy being lost.

ONLY USE RECOMMENDED FUELS

The following table shows the calorific value of different types of wood, which have been stored for 2 years and which have a residual moisture of 15 - 17%.

Wood	Kg dry wood pr m ³	compared to beech/oak
Hornbeam	640	110%
Beech and oak	580	100%
Ash	570	98%
Maple	540	93%
Birch	510	88%
Mountain pine	480	83%
Fir	390	67%
Poplar	380	65%

1kg of wood yields the same heat energy irrespective of wood type.

1kg of beech merely takes up less space than 1kg of fir.

Drying and storage

Drying wood takes time: proper air drying takes approximately 2 years.

Here are some tips:

Store the wood sawn, split and stacked in an airy, sunny place, which is protected against rain (the south side of the house is particularly suitable).

Store the firewood stacks at a hand's breadth apart, as this ensures that the air flowing through takes the moisture with it. Avoid covering the firewood stacks with plastic, as this prevents the moisture from escaping. It is a good idea to bring the firewood into the house 2-3 days before you need it.

Regulating the combustion air

All RAIS stoves are equipped with a one-handed operating lever for regulating the damper. The stove-specific regulating mechanisms can be seen on the diagrams.

Primary air is the combustion air added to the primary combustion zone, i.e. the bed of glowing embers. This air, which is cold, is only used in the lighting stage. Secondary air is the air which is added in the gas combustion zone, i.e. air which contributes to the combustion of the pyrolysis gasses (preheated air, which is used for the cleaner glass system and combustion). This air is sucked through the damper under the combustion chamber and is pre-heated through the side channels and then emitted as hot scavenging air onto the glass. The hot air rinses the glass and keeps it soot-free.

The tertiary channel, which can be seen at the top of the combustion chamber towards the back, serves to combust the final gas residues.

By setting the interval between position 1 and 2, the energy content in the firewood is used optimally, as there is oxygen for combustion and for the burning of the pyrolysis gasses.

When the flames are a clear yellow the damper has been set correctly. Finding the correct position comes with time after you have used for stove for a while.

It is not recommended that you turn it down completely. A mistake commonly made is shutting the damper too early because it feels too hot. This results in dark smoke emanating from the chimney and in the calorific value of the firewood not being used to its fullest.

Room ventilation and stoves

There must not be an extractor fan fitted in the same room as the stove as this can cause the stove to emit smoke and fumes into the room.


The stove requires a permanent and adequate air supply in order for it to operate safely and efficiently.

In accordance with current Building Regulations the installer may have fitted a permanent air supply vent into the room in which the stove is installed to provide combustion air. This air vent should not under any circumstances be shut off or sealed.

Using the wood burning stove


When using the Rais 2:1, it is important that the amount of wood does not exceed the "MAX LOAD" marking pressed into the vermiculite sides of the fire chamber, approximately 19cm height.

Adjusting the air damper. The damper has 3 settings.

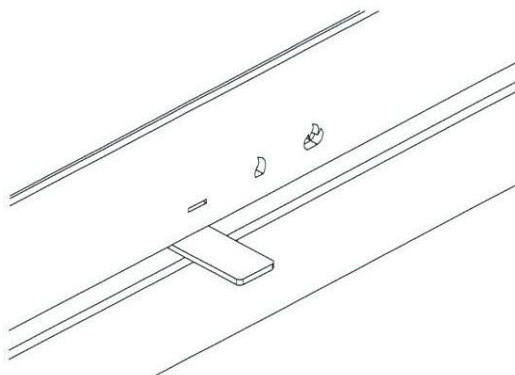

Position 1

The damper is almost closed meaning that there is a minimal air intake.

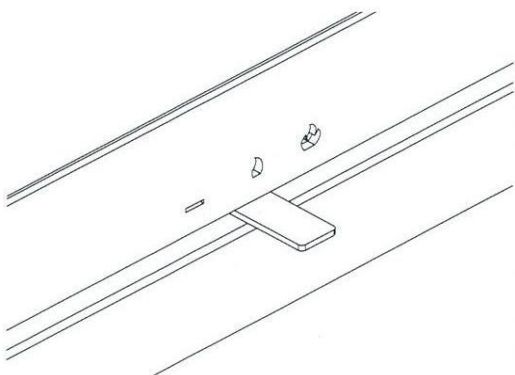


Position 2

Pull / push the lever until the first click. This position gives full secondary air.

During normal use the lever is set between position 1 and 2.

When the flames are clear and yellow, the damper is set correctly, i.e. resulting in a slow/optimal burning.

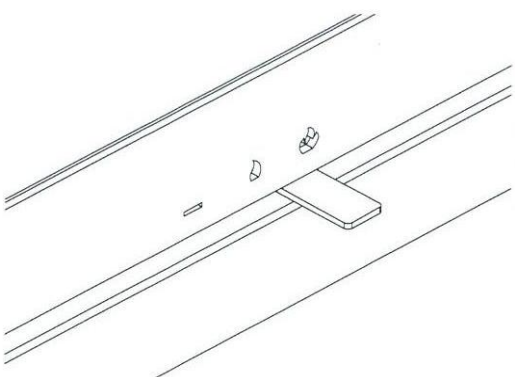

Position 3

Pull / push the lever until the next click.

The air damper is completely open and gives full primary and secondary air. This position is for the lighting stage and is not used under normal operation.

Control

If the ash is white and the walls in the combustion chamber are soot free after the stove has been used, the air regulation was set correctly and the wood was sufficiently dry.

First usage

A careful start pays off. Start with a small fire, so that the wood burning stove can get accustomed to the high temperature. This gives the best start and any damage is avoided.

Be aware that a strange but harmless odour and smoke concoction may emanate from the surface of the stove, the first time you fire up. This is because the paint and materials need to harden. The odour disappears quickly, but you should check the ventilation and draught, if possible. See also, the IMPORTANT warning notice below about persistent fumes.

During this process you must be careful not to touch the painted surfaces, and it is recommended that you regularly open and close the door to prevent the door seal from sticking.

The stove may also produce "clicking noises" during heating and cooling, caused by the large temperature differences which the material is subjected to.

Never use any type of liquid fuel for kindling or maintaining the fire. You could be at risk of explosion.

The stove gets very hot when in use, always wear protective gloves when tending the stove.

If the stove has not been used for a while, follow the steps as if you were using it for the first time.

IMPORTANT - Warning Note!

Properly installed, operated and maintained this appliance will not emit fumes into the dwelling. Occasional fumes from de-ashing and re-fuelling may occur.

However, persistent fume emission is potentially dangerous and must not be tolerated. If fume emission does persist, the following immediate actions should be taken:

- (a) Open doors and windows to ventilate room.
- (b) Let the fire out or eject and safely dispose of fuel from the appliance.
- (c) Check for flue or chimney blockage, and clean if required.
- (d) Do not attempt to relight the fire until the cause of the fume emission has been identified and corrected. If necessary seek expert advice.

IMPORTANT - Warning Note!

Do not use an aerosol spray on or near the stove when it is alight.

IMPORTANT - Safety advice!

When using the stove in situations where children, aged and/or infirm persons are present a fireguard must be used to prevent accidental contact with the stove. The fireguard should be manufactured in accordance with BS 8423:2002 (Replaces BS 6539).



Lighting and fuelling

To light the stove, use alcohol briquettes or similar, as well as approximately 2kg of firewood, split into kindling sticks. Set the air damper to the fully open position.


It is important that the Air-Kit system airtight flap, located at the rear of the stove (if fitted), is always opened prior to lighting the stove.



Tips before firing up:

Open a door or window close to the wood burning stove.

If there is 'storm' in the stove coming from the chimney it is advisable to place a screwed up piece of newspaper between the upper baffle plate and the chimney. Light the paper and wait until you hear a 'rumbling' noise in the chimney. This means that there is definitely a draught in the chimney and you should avoid smoke coming back into the room.

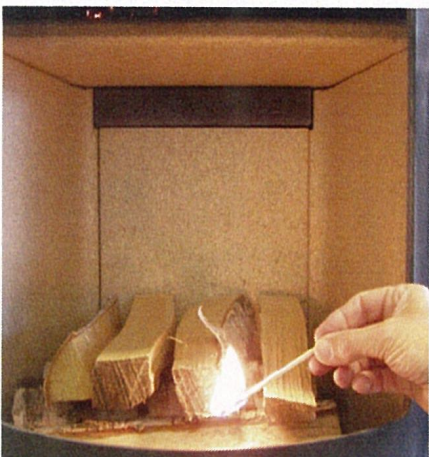

Light the fire and shut the door, leave the door ajar approximately 10-15mm.



When the flames are clear, after approximately 5-10 minutes, close the door.

Damper - see adjustment of the damper.



After approximately 10-20 minutes, when you have a good bed of glowing embers, add 2-3 pieces of wood. Leave the door ajar until the fire has caught properly, then close the door.

Damper - see adjustment of the damper.



After approximately 5 minutes, or when the flames are clear and stable, close the damper gradually.

It is recommended to have a layer of approximately 20mm, as it has an insulating effect.



NOTE!

During operation the door should always remain closed.



Cleaning and care

The wood burning stove and the chimney must be serviced by a chimney sweep twice a year.

During cleaning and care, the stove must be cold.

If the glass is sooty:

- Moisten a piece of paper or newspaper, dip it in the ash, and rub the sooty glass with it.
- Now rub with a dry piece of paper and the glass will become clean.
- As an alternative you can use glass cleaner, which you can buy from you RAIS distributor.

Clean the exterior with a dry sponge or a soft brush.

Cleaning the combustion chamber:

Scrape/shovel the ash out and store it in a non-flammable container until it has cooled down. You can dispose of ash with your normal household waste or recycle on the garden.

REMEMBER!!

Never remove all the ashes from the combustion chamber - the wood will burn at its best with a layer of ashes of approx. 20 mm.

Prolonged periods of non-use:

If the stove is to be left unused for a prolonged period of time then it should be given a thorough clean to remove ash and unburned fuel residues. To enable a good flow of air through the appliance to reduce condensation and subsequent damage, leave the air controls fully open.

Prior to a new heating season, it should be checked that the chimney and flue pipe connector are not blocked.

Cleaning of the flue ways




The flue ways consist of a baffle plate and a smoke conductor above. Both parts are made of Vermiculite. Handle these parts carefully. Lift the baffle plate a little and push towards one of the sides.



Remove the baffle plate by lifting it upwards and tilting on it's end. The other end is lowered and the baffle plate turned a little. Gently take out the baffle plate.



Remove the smoke conductor, which is positioned above the baffle plate. Lift one side up and lower the other. Gently lower the smoke conductor and remove it.

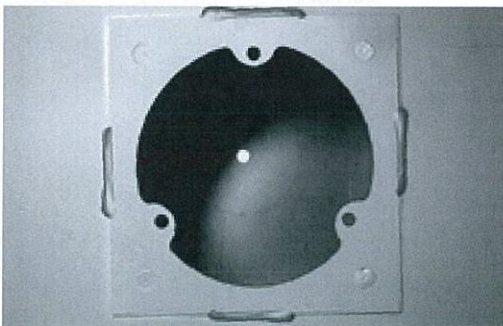

Now there is a clear view of the smoke exit.

Remove any dirt / dust and put the parts back in, in reverse order.

Problem solving

Smoke spillage around door:

- could be due to too low draught in the chimney <12Pa
- check if the flue or chimney is blocked
- check if a extraction hood is switched on; if it is, switch it off and open a window/door in the proximity of the stove for a short while.

Soot on glass:

- could be because the firewood is too wet.
- make sure that the stove is heated properly when firing up, prior to closing the door
- could be because the damper regulation is too low.

A stove burning too strong could be caused by:

- a leak around the door seal
- chimney draught too large >22 Pa, draught control regulator should be installed.

A stove burning too weakly could be caused by:

- too little firewood
- too little air supply for the room ventilation
- dirty smoke channels
- leaking chimney
- leakage between chimney and flue

If your stove continues to malfunction, we recommend that you contact your RAIS distributor or chimney sweep.

IMPORTANT!!

To ensure safe burning there must be clear yellow flames or clear embers at all times. The firewood should not be smouldering. Therefore you should never completely cut off the air supply.

WARNING!!

In case of chimney fire:

- shut off all air supply on the wood burning stove
- contact the fire services
- never attempt to put out fire with water!
- afterwards, you should ask your chimney sweep to check the stove and chimney

Accessories and spare parts


If spare parts other than those recommended by RAIS are used, the warranty is voided.

All replacement spare parts can be purchased from your RAIS distributor / stockist.


See the following spare parts diagrams for the individual products.

Accessories

910050190 Telescopic legs

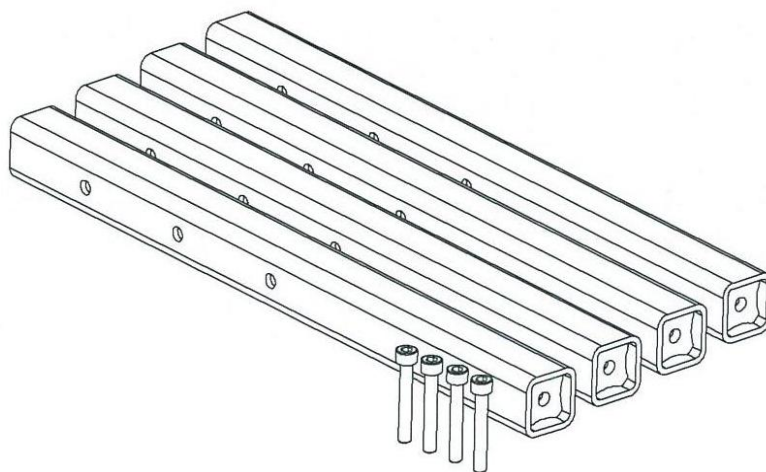



910050290 Base frame

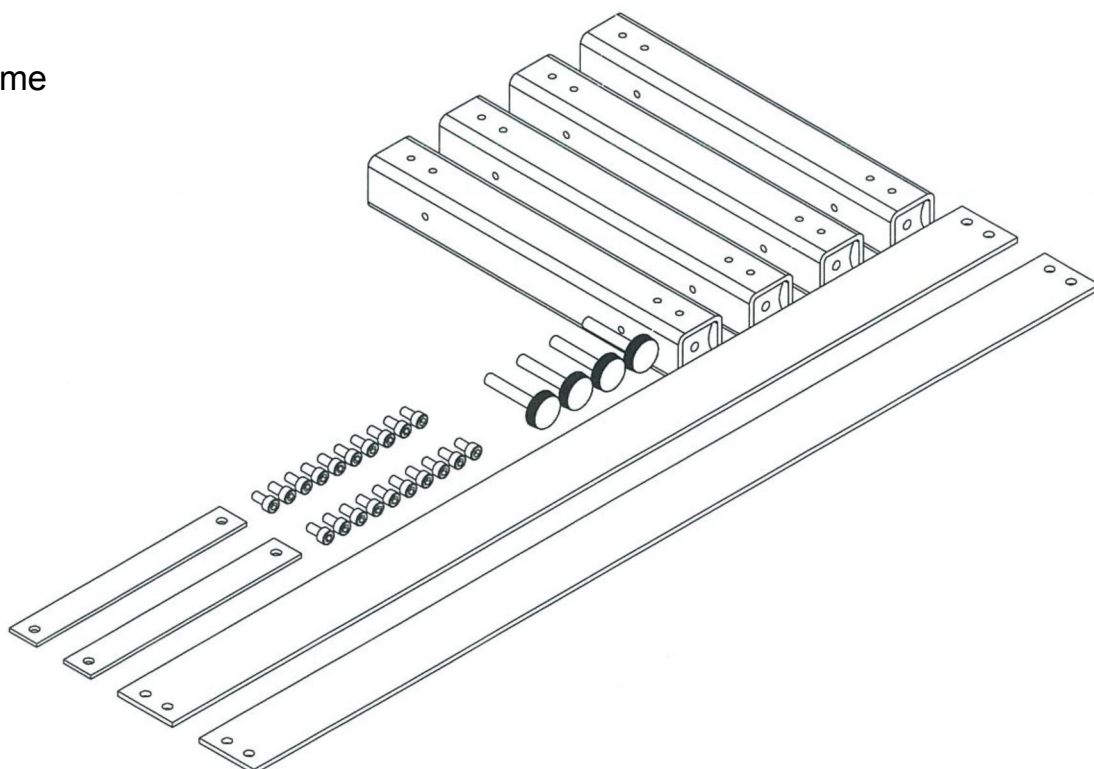

Spare parts diagram - Rais 2:1

Position / Ref	Quantity	Item No	Description
1	2	9101401SORT	Complete front
2	2	9101090	Door - left hinged
	2	9101090H	Door - right hinged
		9101090L	Door - left hinged - locked
		9101090LH	Door - right hinged - locked
		9101032	Tool for locked door
3	1	9102200	Fire brick set
4	1	9100990	Air-system
5		9105500	Seal set

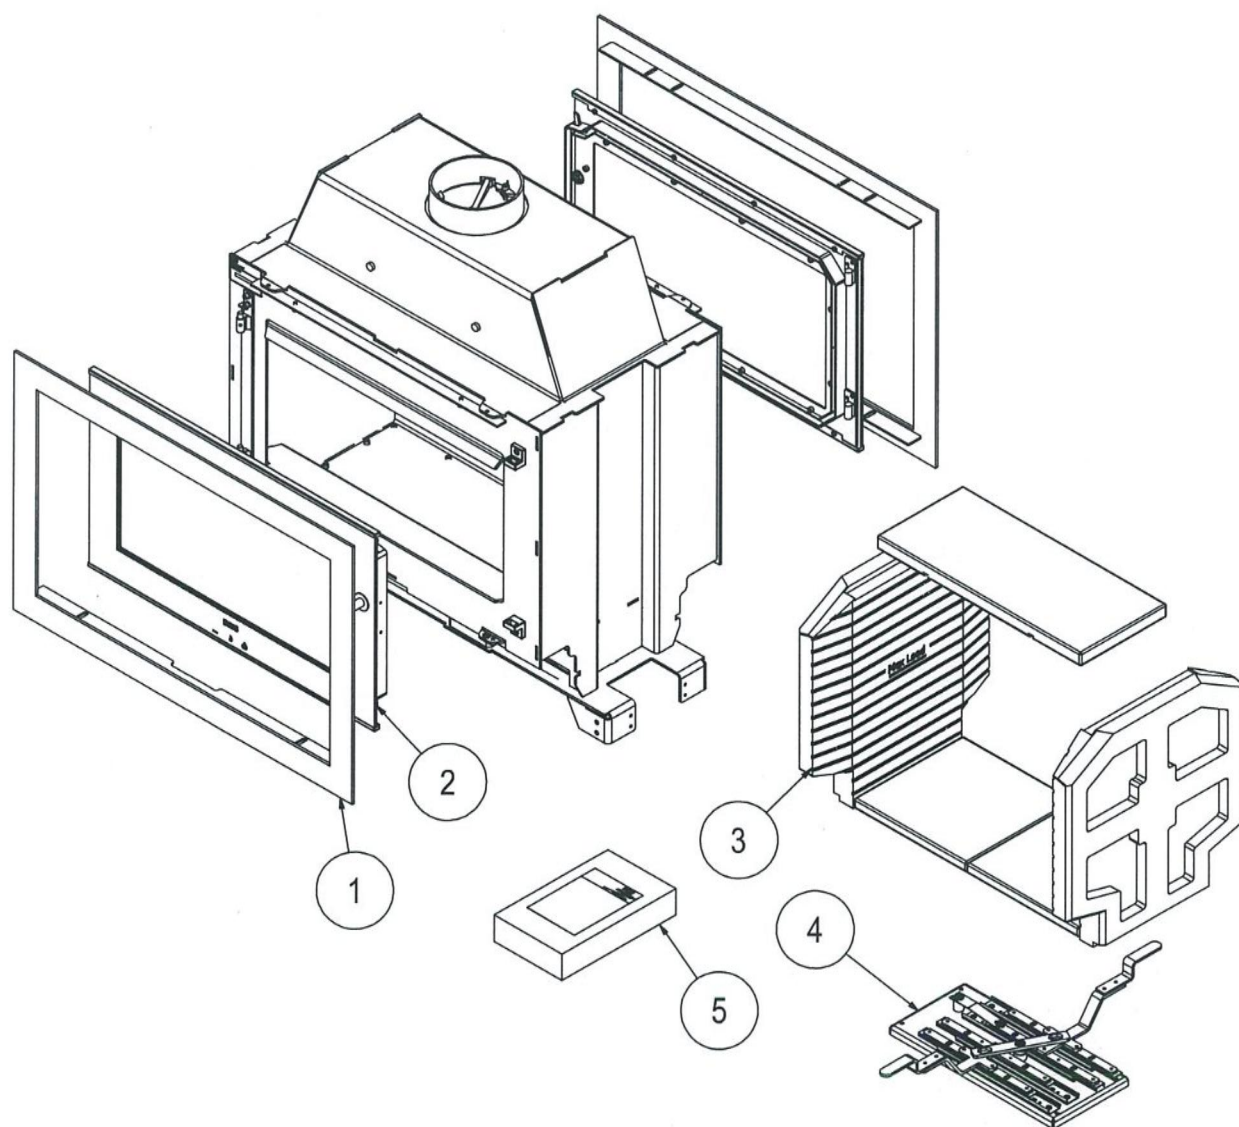

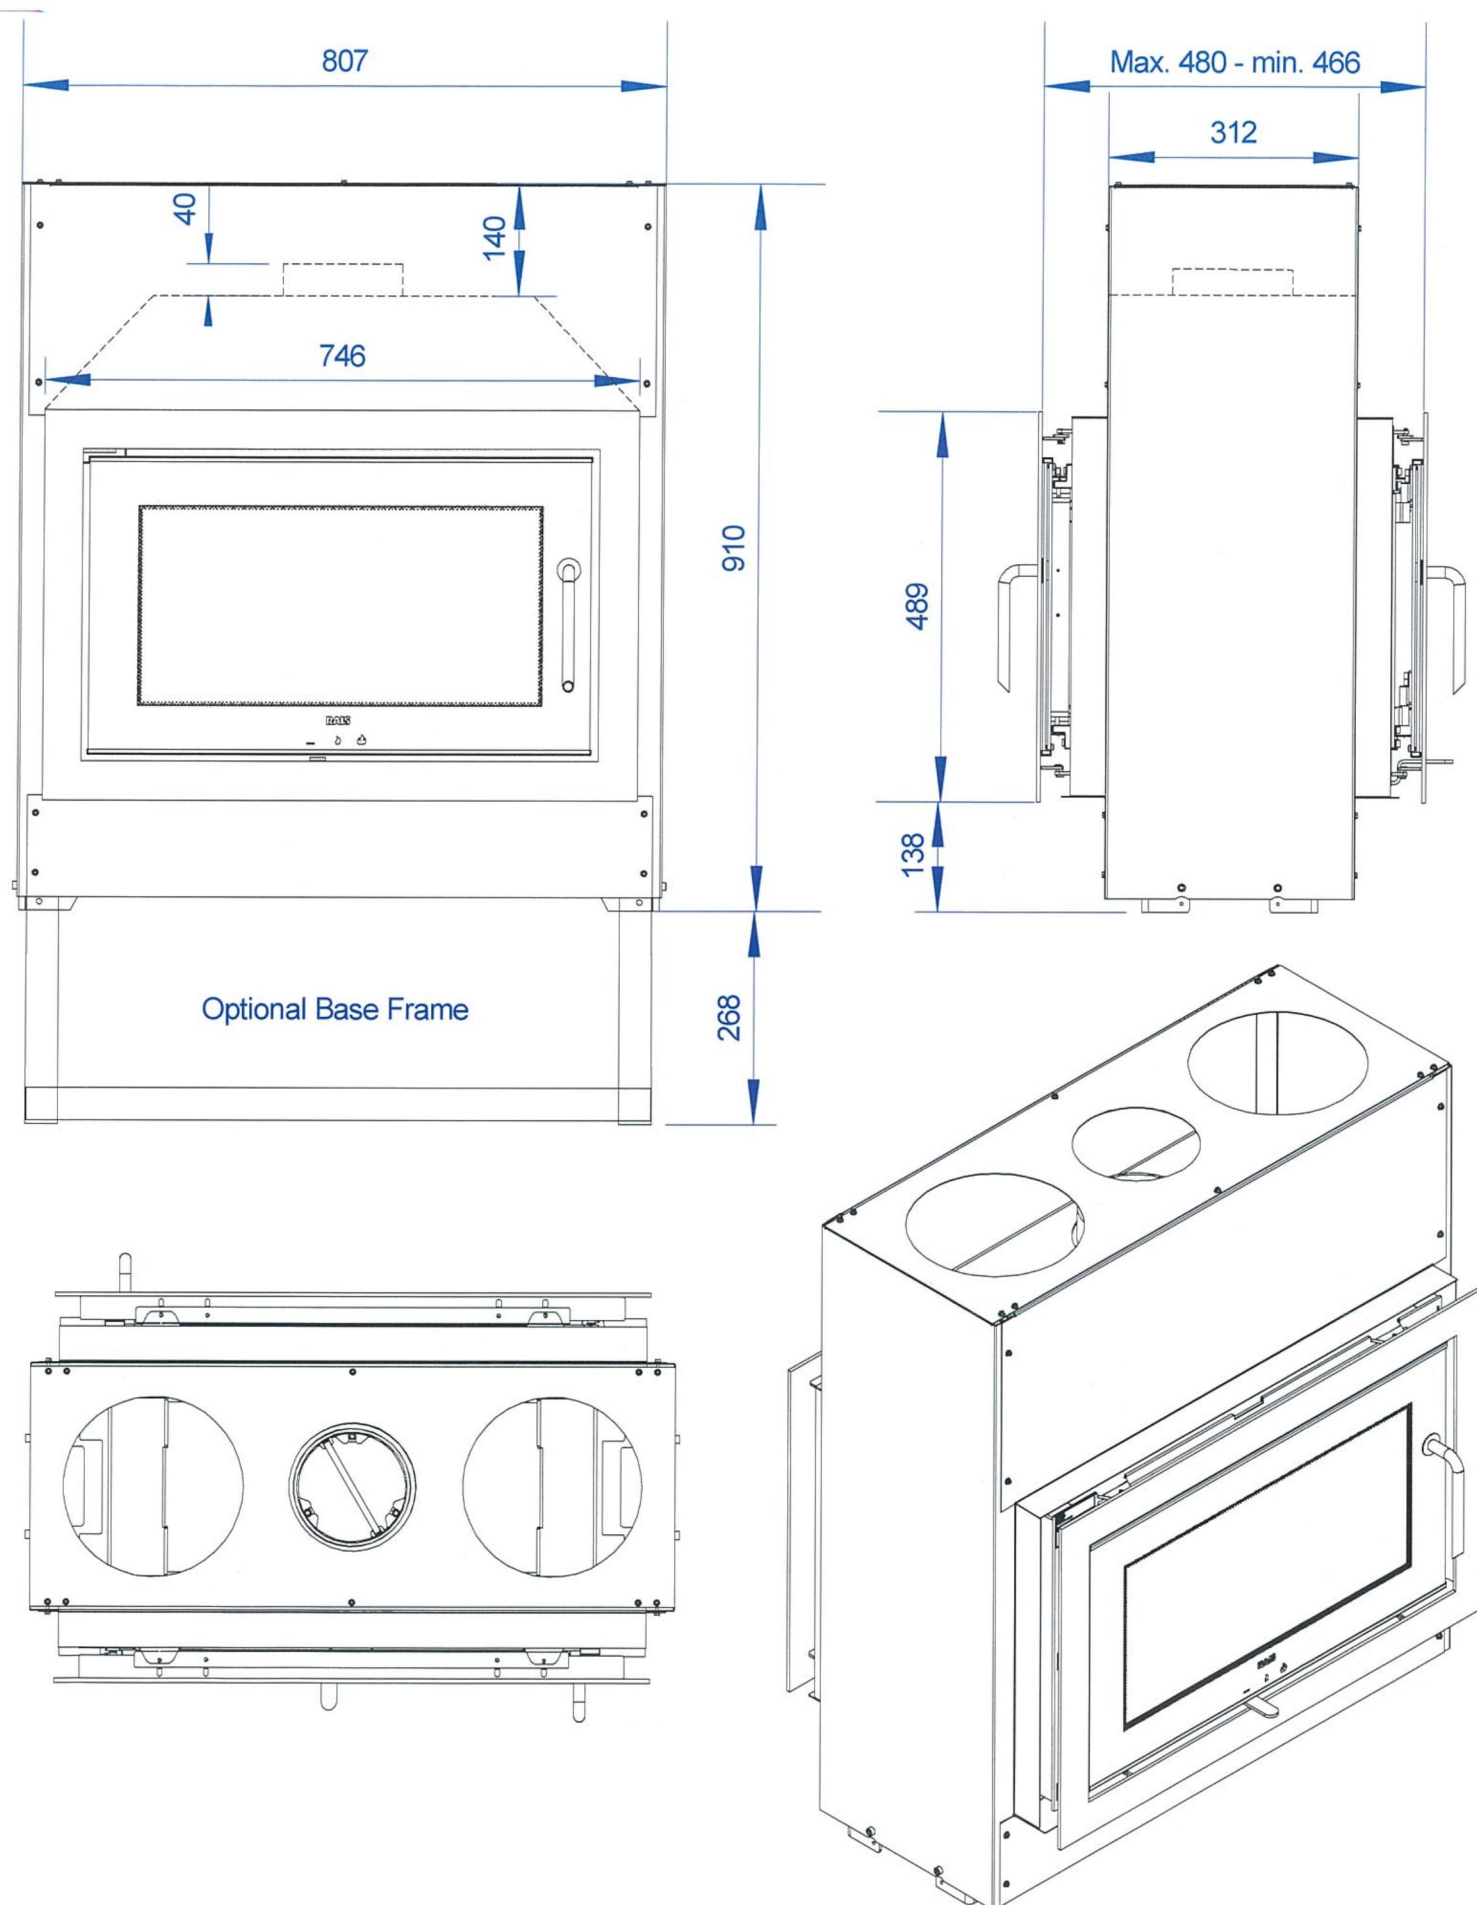

RAIS A/S
Industrivej 20
DK-9900 Frederikshavn
www.rais.dk

Robeys

U K Distributor.

Robeys Ltd.
Riverside, Goods Road, Belper,
Derbyshire, England. DE56 1UU
Tel: 01773 820940 Fax: 01773 820477
E Mail: info@robeys.co.uk
www.robeys.co.uk



THE ORIGINAL